

## FLEXPLATE KIT

### FORD 289, 302, 351 ALL, 400 TO C4/AOD 164 TEETH, INTERNAL BALANCE

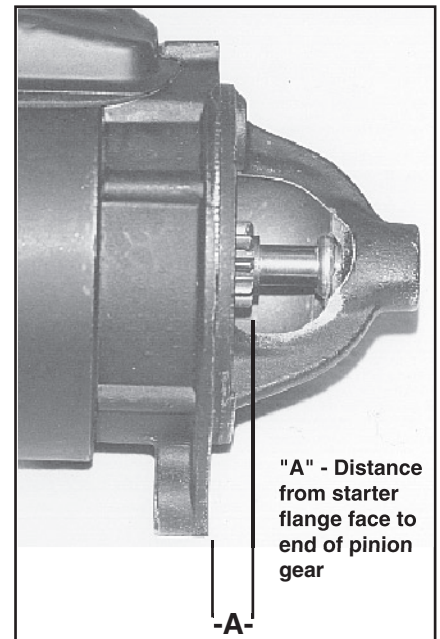
PART # 915727

**PARTS LIST:**

- 1 (915602) Crankshaft Adapter
- 1 (915707) SFI Flexplate
- 1 (950143) Hardware Package
  - 6 PCS (951480) 7/16-20 x 1" Crankshaft Screws  
(with a head height of .225")

**NOTE:**

1. Crankshaft adapter is placed on crankshaft, then the flexplate is bolted on. Loctite 242 should be used on threads of the crankshaft screws.
  
2. The end clearance and engagement length of the starter pinion gear with the flexplate ring gear **MUST BE CHECKED** (See Figure 1). End clearance should be at least .050 inches and engagement length at least 2/3 of ring gear width. Listed below are nominal "A" distances for typical Ford Starters.

**TRANSMISSION**

C4, AOD  
C6, E4OD  
C6, E4OD

**FORD STARTER**

E4TF-11001-AA or Equiv.  
D8AF-11001-AA or Equiv.  
D1AF-11001-AA or Equiv.

**"A" DISTANCE**

.260 inches  
.430 inches  
.590 inches