

FLEXPLATE KIT

FORD 289-302-351-400 ALL TO C6/E40D

164 TEETH, INTERNAL BALANCE

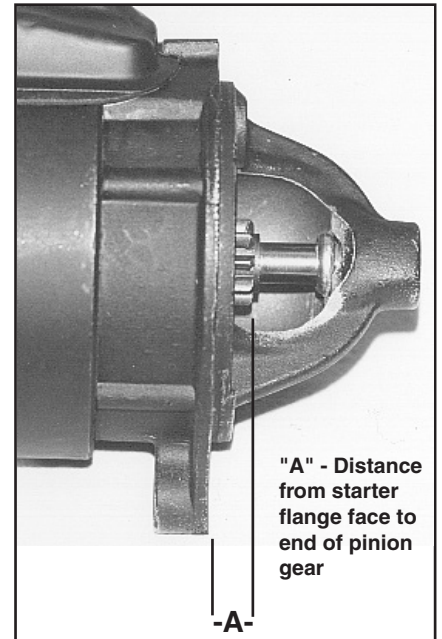
PART # 915724

PARTS LIST:

- (1) #915601 Crankshaft Adapter
- (1) #915704 SFI Flexplate
- (1) #950142 Hardware Package
- 6 PCS #951470 7/16-20 x 1 1/4" Counterbore Screws

NOTE:

1. Crankshaft adapter is placed on crankshaft, then the flexplate is bolted on.
2. The end clearance and engagement length of the starter pinion gear with the flexplate ring gear **MUST BE CHECKED** (See Figure 1). End clearance should be at least .050 inches and engagement length at least 2/3 of ring gear width. Listed below are nominal "A" distances for typical Ford Starters.

**TRANSMISSION**

C4, AOD
C6, E4OD
C6, E4OD

FORD STARTER

E4TF-11001-AA or Equiv.
D8AF-11001-AA or Equiv.
D1AF-11001-AA or Equiv.

"A" DISTANCE

.260 inches
.430 inches
.590 inches



ATI Flexplates are flat, not dished and require the converter to have mounting pads forward of the body.