

FLEXPLATE KIT

FORD 289-302 TO C4/AOD

157 TEETH, INTERNAL BALANCE

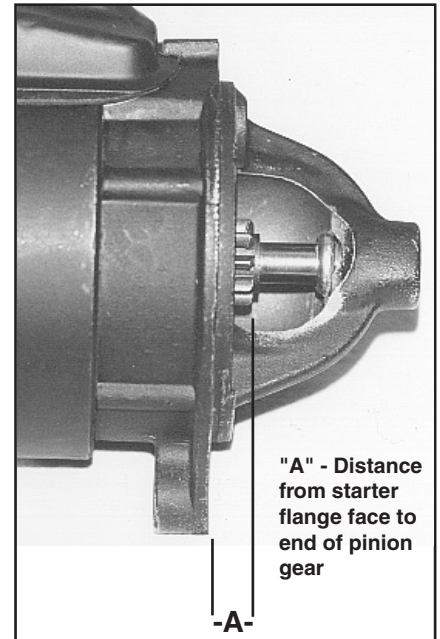
PART # 915730

PARTS LIST:

- (1) #915602 Crankshaft Adapter
- (1) #915710 SFI Flexplate
- (1) #951471-6 Hardware Package
 - 6 PCS #951471 7/16-20 x 1 1/4" Crankshaft Screws (with a head height of .225")

NOTE:

1. Crankshaft adapter is placed on crankshaft, then the flexplate is bolted on. Loctite 242 should be used on threads of the crankshaft screws.
2. The end clearance and engagement length of the starter pinion gear with the flexplate ring gear **MUST BE CHECKED** (See Figure 1). End clearance should be at least .050 inches and engagement length at least 2/3 of ring gear width. Listed below are nominal "A" distances for typical Ford Starters.

**TRANSMISSION**

C4, AOD
C6, E4OD
C6, E4OD

FORD STARTER

E4TF-11001-AA or Equiv.
D8AF-11001-AA or Equiv.
D1AF-11001-AA or Equiv.

"A" DISTANCE

.260 inches
.430 inches
.590 inches



ATI Flexplates are flat, not dished and require the converter to have mounting pads forward of the body.