


6747 Whitestone Road • Baltimore, MD 21207 • (410) 298-4343 • FAX: (410) 298-3579 www.atiracing.com

TV CABLE CORRECTOR KIT HOLLEY CARBURETOR

Part #702040

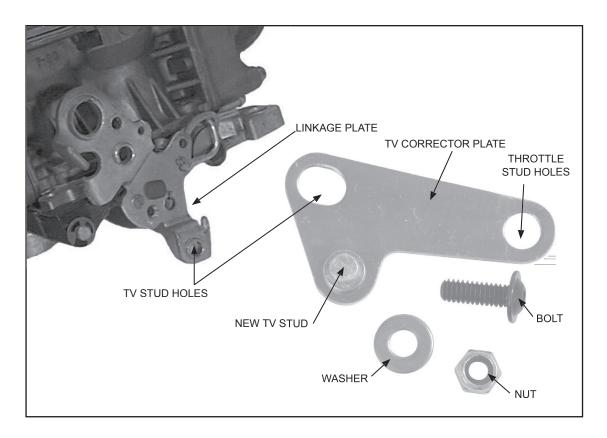

- 1. Disconnect the TV cable and throttle cable from the carburetor.
- 2. Remove the TV stud and throttle stud from the linkage plate. Save the throttle stud: you will reuse it in step #4.
- 3. Align the TV and throttle stud holes of the TV corrector plate with the TV and throttle holes on the carburetor's linkage plate. Make sure the new TV stud faces away from the carburetor.
- 4. Reinstall the throttle stud. Do not tighten this stud yet!
- 5. Install the bolt, washer and nut supplied through the TV stud holes of both plates and tighten. Tighten the old throttle stud (from step 4).
- 6. Attach both the TV cable and throttle cable. Adjust as needed and use the OE TV geometry as a reference when modifying the TV cable bracket location.