

FLEXPLATE KIT

**FORD 289-302 (through 1980) - 351 ALL - 400 TO C6/E40D
164 TEETH, EXTERNAL BALANCE, 28.2 OUNCE INCHES**


PART # 915725

PARTS LIST:

- 1 (915601) Crankshaft Adapter
- 1 (915705) SFI Flexplate
- 1 (950142) Hardware Package
- 6 PCS (951470) 7/16-20 x 1 1/4" Counterbore Screws

NOTE:

1. Crankshaft adapter is placed on crankshaft, then the flexplate is bolted on.
2. The end clearance and engagement length of the starter pinion gear with the flexplate ring gear **MUST BE CHECKED** (See Figure 1). End clearance should be at least .050 inches and engagement length at least 2/3 of ring gear width. Listed below are nominal "A" distances for typical Ford Starters.

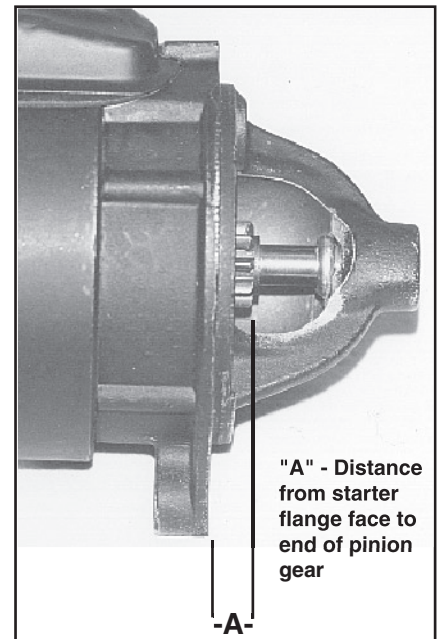

TRANSMISSION

C4, AOD
C6, E4OD
C6, E4OD

FORD STARTER

E4TF-11001-AA or Equiv.
D8AF-11001-AA or Equiv.
D1AF-11001-AA or Equiv.

"A" DISTANCE

.260 inches
.430 inches
.590 inches